






IMPORTANCE OF THESE INSTRUCTIONS

- Read all these instructions before using this product to avoid serious injury or death.
- Improper use, tampering, maintenance, or self-repair of this product may result in serious injury or death.
- Failure to read and follow these Instructions may result in serious injury or death.

WELCOME TO LOTO LUX

Congratulations on your obviously excellent taste.
This is a quick guide to help you get started.

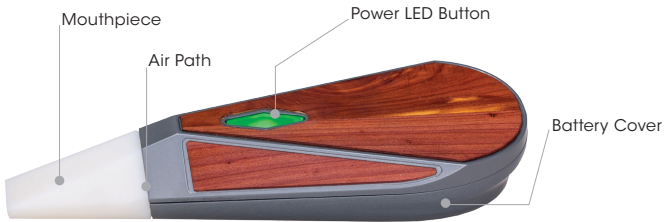



STEP 1

Behold your Loto Lux and all its glory.

STEP 2

Remove curved battery cover by first removing the mouthpiece. To separate mouthpiece from body, push flat part of mouthpiece forward using thumb and remove. Do not pull apart. Use the rounded groove to separate the metal battery cover from the upper housing.



STEP 3

Insert fully-charged, Loto-Labs-approved 18650 battery. Situate positive end in the middle of the device and negative end at the bottom.

Note: Using improper batteries will void warranty & may result in damage to the device.



STEP 4


Close battery cover securely so it fits evenly-aligned with upper housing.



STEP 5

Fill Loto Lux capsule with designated material. Always fill/pack material around the susceptor and ensure susceptor is vertically centered.

For more detailed instructions and tips on different materials, please visit lotolabs.com.

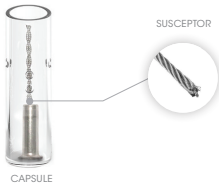

STEP 6

Slide filled capsule into Induction Chamber open-side facing up, and replace the mouthpiece.



STEP 7

Loto Lux is powerful. So we equipped it with UNLOCK functionality to prevent unintentional activation and ensure **you control the heat.**

- To UNLOCK, simply PRESS once, and then PRESS & HOLD until button turns GREEN. Button will flash MAGENTA while unlocking.
- Once GREEN, button will pulse for 2 seconds and then steady. When button is steady GREEN, your Loto Lux is unlocked and ready for use.
- To draw, PRESS & HOLD and inhale.

PRO TIP: If material is liquid or particularly moist, start holding 1 to 2 seconds prior to draw for an especially potent experience.

- Button will shine WHITE to indicate Lux is in DRAW mode (Full Power).
- Let go when you feel sufficient heat has been applied, or draw is complete.
- To turn OFF, PRESS button 3X in rapid succession.



COLOR	FLASH/PULSE	STEADY
◆ Magenta	Unlocking (3 sec)	Locked/Awake
◆ Green	Warm Up (3 sec)	Unlock/Draw-ready
◇ White	N/A	Draw Mode/Full Power
◆ Blue	Pairing	Paired
◆ Red	Replace Battery	N/A

QUICK TIPS

- Download app for Bluetooth syncing instructions.
- Allow leftover material to cool in device before refilling or storage.
- For best results, clean after every 5 uses.
- Do not overfill capsules. See additional instructions online.
- Never touch capsule or suscepter while hot.
- Use tweezers for easy capsule removal.

